

# **TRUCAST 3**

**Wireless projection system**

**Firmware update  
Instruction manual**

(January 2017)

Version: 1.0

## 1 Downloading update firmware

- 1.1 From Newline Interactive Web site, please download the update firmware in advance.



Warning: Please make sure to download the firmware of the correct model.

## 2 Open Admin page

- 2.1 Make sure your PC/Mac connect to TRUCAST 3 box successfully.
- 2.2 Enter the receiver IP address on your browser; you can find the IP address on the projector/display screen. (Default IP is 192.168.100.10).

- 2.3 Click on “Admin” and then enter the password to login web admin page. (Default Password: admin)

### 3 Firmware update

3.1 Click on "Firmware Upgrade" option on the side bar.

TRUCAST

TRUCAST3 > Admin > Firmware Upgrade Logout

**System Status**  
**Device Setup**  
**Network Setup**  
**WiFi Setup**  
**SNMP Setup**  
**OSD Setup**  
**WebSlides Setup**  
**Certification Setup**  
**Change Passwords**  
**Reset to Default**  
**Firmware Upgrade**  
  
 **Reboot System**

**System Configuration**

Export System configuration

**Firmware Upgrade**

Firmware Version 2.0.6.6  
Release Date 20151112

Please stop the projection function first before you apply the Upgrade button!!

File Name

Copyright © 2015. All Rights Reserved

3.2 Click <Browse> and chose the latest firmware file downloaded from Newline Interactive web page.

3.3 Click <Upgrade> to start.

3.4 A warning message shown and count down counter on the screen.

**Please wait while System burns new firmware into your device.**

Warning: It needs to take 2-5 minutes to burn the file you transferred into flash memory. **During this period, any interrupt such as shut down or reboot the system will cause system crash!!**


Estimated Time remaining: 1: 90 seconds

3.5 After a few minutes, a complete message shown on the screen.

3.6 Restart TRUCAST 3 box to take effect.



Tip: Before the firmware update, please stop the projection.

 Warning: Don't power off TRUCAST 3 while firmware upgrade in progress, otherwise you will damage your box.